
 


Basic play




1 Power ON.


2 Open the drawer and place the disc(s).



- Load double-sided discs so the label for the side you want to play is facing up.
- To load discs on the other trays, press [DISC SKIP] on the main unit.
- Play will start from the disc in the front-left position.


3 Close the drawer.
 The disc indicators light when there are discs in the trays.






DVD-F87 only
 Press to enter the number (→ below).

1	2	3	4	5	≥10
6	7	8	9	0	CANCEL

Stop Pause
 

4 Start play.

 When the disc finishes playing
 If the next disc doesn't start playing, select the disc.


Press to skip.
 Press and hold to
 –search.
 –slow-motion.
 


Stop


The position is memorized when “▷” flashes on the display.
 • Press [▶] (PLAY) to resume.
DVD-V To review the previous chapters (→ page 14, Position memory)
 • Press [■] to clear the position.

Pause


• Press [▶] (PLAY) to restart play.

Skip


 
(Group skip **WMA** **MP3** **JPEG**)


Search
 (during play)
Slow-motion
 (during pause)


• Up to 5 steps
 • Press [▶] (PLAY) to start play.
 • **VCD** Slow motion, forward direction only

Frame-by-frame
 (during pause)


• **VCD** forward direction only


On-screen item select


Select
 Register

Note

- “D.MIX” on the display indicates that a multi-channel soundtrack can be down-mixed to two channels.
- Discs continue to rotate while menus are displayed. Press [■] when you finish to preserve the unit's motor and your television screen.

If you are experiencing problems, refer to troubleshooting

Enter number


RAM DVD-A DVD-V VCD CD

 e.g. To select 12:
 [≥10] → [1] → [2]
VCD with playback control
 While stopped, press the numbered buttons.

WMA MP3 JPEG

 e.g. To select 123:
 [1] → [2] → [3] → [ENTER]
 • Press [CANCEL] to cancel the number(s).

Disc menu


DVD-A DVD-V

 Shows a disc top menu


DVD-V

 Shows a disc menu

VCD

 Shows a disc menu

Return to previous screen


Main unit display


Number display
 ↑
 Time display
 ↓

Information screen


WMA MP3 JPEG

 Turns the information screen on/off

Standby/on switch (⏻/⏻)
 Press to switch the unit from on to standby mode or vice versa. In standby mode, the unit is still consuming a small amount of power.
Standby/on indicator (⏻)
 When the unit is connected to the AC mains supply, this indicator lights up in standby mode and goes out when the unit is turned on.